


PANDUIT®

 smartzone™ *cloud*

SECURITY OVERVIEW

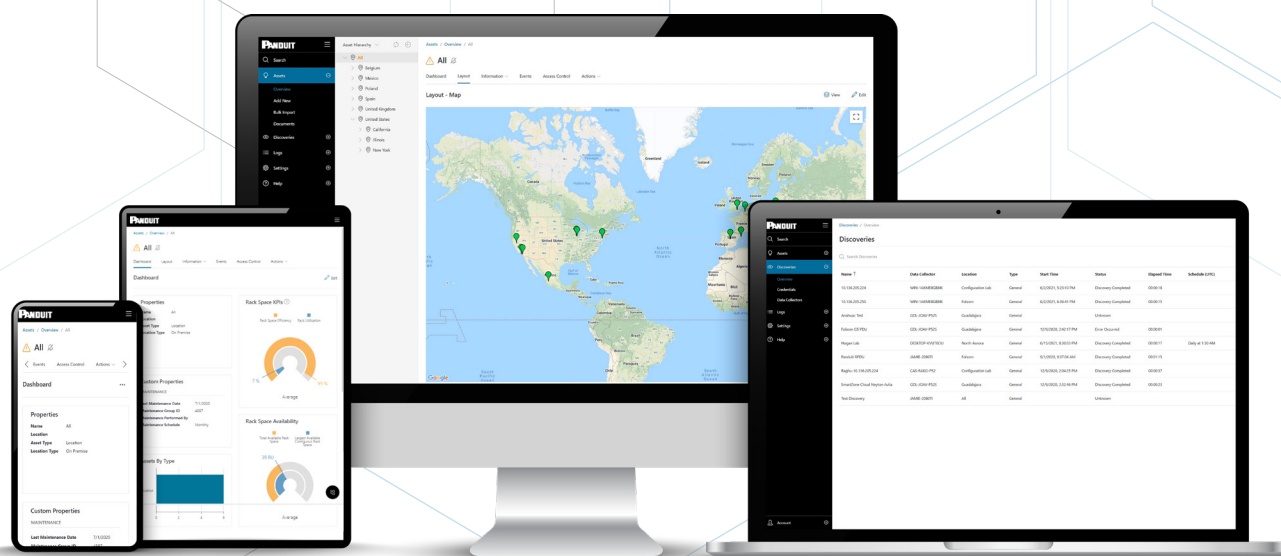

smartzone™ cloud

TABLE OF CONTENTS

Overview	3
Trusted Platform Foundation	3
Types of Data.....	3
Customer Data Isolation.....	4
Authentication	4
Authorization	4
Stored Credentials Security	4
Data at Rest Security	5
Data in Transit Security	5
Data Collector Security	5
Collected Data.....	5
Modbus and BACNet	10
Model and Device Definitions.....	10
Model Data	10
Device Definition	11
SNMP Traps	12



OVERVIEW

This document describes authentication, authorization, and data protection techniques in SmartZone™ Cloud, a SaaS platform. Topics covered are:

- Trusted Platform Foundation
- Types of Data
- Customer Data Isolation
- Authentication
- Authorization
- Stored Credentials Security
- Data at Rest Security
- Data in Transit Security
- Data Collector Security
- Model and Device Definitions

TRUSTED PLATFORM FOUNDATION

SmartZone™ Cloud is deployed on top of Microsoft Azure. It leverages the Azure application security services, continuous vulnerability scanning, and the work completed by Microsoft to certify their data centers for PCI, SOC and other certifications.

TYPES OF DATA

There are four types of data stored in the platform:

User identification data. This is data used by the platform to authenticate a user and is limited to email, first and last name, password, and (optional) phone number. User identification data is owned by the user and is deleted if the user chooses to terminate their relationship with SmartZone™ Cloud.

Customer application data. This is data created by the user, collected automatically by a SmartZone™ Cloud Data Collector, or generated while using the application. Examples include asset properties, data center floor layouts, sensor data, application usage log, and asset change logs. Customer application data is owned by the user and is deleted if the user chooses to terminate their relationship with SmartZone™ Cloud.

Platform health data. This is data generated by SmartZone™ Cloud that is used to improve the application. Examples include latency data and application errors. Platform health data is owned by Panduit and is used to improve the performance, stability, and usability of the platform.

Enrichment data. This is data provided by SmartZone™ Cloud to extend customer data. Examples include device attributes and software vulnerabilities. Enrichment data is owned by Panduit and is used to enrich and improve user provided and collected data.



CUSTOMER DATA ISOLATION

Customer application data is stored in two databases.

Time Series Big Data Store

This database keeps anonymized numeric sensor readings over time. For example, a reading would be a timestamp, sensor identifier (UUID), Sensor Type (e.g. Temperature), reading (e.g. 70).

Customer Data Store

All other customer data is kept in a dedicated database that is isolated and dedicated for customer use. This database keeps all Asset Information, Users, Layout, credentials etc.

AUTHENTICATION

SmartZone™ Cloud customers can create their own dedicated user accounts in the platform or use an enterprise single sign-on with Azure AD/Microsoft 365.

AUTHORIZATION

SmartZone™ Cloud has the following user roles:

- Administrator
- Data Center Manager
- Power User
- Reporting User
- Read Only User

User roles define what users can do in the application. In addition, an Administrator can define access controls on specific assets to limit what other users can see and interact with. For instance, a group of users can be restricted from viewing a certain location.

STORED CREDENTIALS SECURITY

SmartZone™ Cloud users can add access credentials for managed devices.

For example, SmartZone™ Cloud will use a configured SNMP community string to access sensors like current utilization from a managed Power Distribution Unit (PDU). Device credentials are stored in the SmartZone™ Cloud database and encrypted using the Advanced Encryption Standard (AES-256) with keys that are unique to the user. This data is always stored and transported encrypted even over HTTPS.

For data collection, it is recommended to use unprivileged or read-only user levels for device credentials.

Data at Rest Security The application is installed in Microsoft Azure and uses the at-rest data protection capabilities of Azure Cloud. The Data Collector is installed by the customer on a Windows physical or virtual machine. If at-rest data protection is required for Data Collectors, technologies like BitLocker can be employed.

Data in Transit Security All interactions with the platform from a user (using a web browser) or from a Data Collector (as it communicated with the APIs) is secured with HTTPS.

Data Collector Security The SmartZone™ Cloud Data Collector can be installed on one or more Windows Server 2016 instances on physical or virtual servers. It collects and relays data back to the SmartZone™ Cloud platform, which lets you monitor and perform operations against the collected data. The Data Collector must be registered with the platform before it can relay information. Registration is a special handshake that creates a unique identifier to access the platform. The process can only be triggered from the machine that hosts the Data Collector and requires a unique key that is generated by the platform for that Data Collector. Once registered, the Data Collector secures the key in a configuration file that is stored locally in a secure manner. It will then poll the platform for data collection jobs. Note that all communication between the SmartZone™ Cloud platform and the Data Collector must be initiated by the Data Collector.

COLLECTED DATA

Three types of data are collected by SmartZone™ Cloud: Data needed to identify assets (e.g. make, model and serial number), data to monitor the utilization of assets (e.g. power draw or CPU utilization); and data to graph the relationship of an asset in relation to other assets (e.g. network connectivity and power connectivity).

With that in mind data collection follows these design tenants to ensure security and privacy:

- The customer is in control of what protocols to enable.
- The customer is in control of the privilege level of the user used to collect data. Data collection will function with read only access levels.
- The customer is in control of what networks and IP ranges to discover and monitor.
- The customer is in control on where to place a data collector in the network and which networks it will have access to.

Only data needed to perform the above three tasks is collected.

Below is a list of data types that is discovered and monitored by protocol and, where applicable, by device type. Please note, the list below may change based on the capabilities of the target systems, vendors, firmware versions, allowed access, and protocol versions.

While every effort has been made to ensure the list is comprehensive, SmartZone™ Cloud is a continuously developed product that operates in a multi-vendor environment where networked assets are constantly changing and where vendors extend standard protocols or implement them in a non-standard way.

As a result, there may be some variation in what data is collected and monitored between vendors and generations of hardware/firmware.

We encourage users to review the SmartZone™ Cloud Model and Device Definitions section for more information on the topic.



BMC-based Protocols:

IPMI, iLo and iDRAC

- Firmware version
- Make and model of the device
- Motherboard serial number
- Device serial number
- Temperature Sensors
- Voltage Sensors
- Current Sensors
- Fan Sensors
- Chassis Physical Security Sensor
- Processor type, make and model
- Power Supply Sensors
- Power state Sensor
- Memory type, make and model
- Drive Slot configuration
- BMC LAN information
- Management Subsystem Health
- Motherboard Battery
- Field Replaceable unit state
- Inventory (e.g. Servers, blades and network assets)
- Inventory identification (e.g. Managed Models, Serial numbers and blade location)
- Inventory configuration (e.g. Storage, CPU and memory)
- Sensors (e.g. Power and temperature)

SSH for Linux/Unix

- Installed Software list
- CPU information
- CPU utilization
- RAM information
- RAM utilization
- Network hardware information (e.g. IP and MAC)
- Disk capacity sensor
- Storage hardware information

Windows WMI

- Installed Software list (apt/rpm tool)
- CPU information
- CPU utilization
- RAM information
- RAM utilization
- Network hardware information (e.g. IP and MAC)
- Disk capacity sensor
- Storage hardware information
- Hyper-V virtual machine list



SNMP

SNMP is a definitions-based protocol and supports a large variety of devices and manufacturers. Below is a list of the general kinds of data and sensors discovered and monitored by SmartZone™ Cloud by device type. Please note that the intention is to give the reader a good idea on what is monitored. The specific list of sensors read on an asset depends on the manufacturer, asset type, the capabilities embedded in the SNMP implementation and the device definition provided by SmartZone™ Cloud.

Network Switch

- Switch port configuration
- MAC Addresses per port
- Identification and inventory information
- VLAN information

Busway

- Frequency
- Phase Current
- Phase Power
- Phase VA
- Phase Voltage
- Phase Voltage Total
- Total Current
- Total Load
- Total Power
- Total VA
- Total VAR

Chiller

- Cooling Demand
- Cooling Load
- Cooling Output
- Humidification Active
- Dehumidification Active
- Sensor Failure
- Power
- Return Temperature

CRAC

- Air Flow
- Cooling Demand
- Cooling Load
- Cooling Output
- Dehumidification Active
- Dew Point
- Enter Water Temperature
- Fan Failure Boolean
- Fan Speed
- Humidification Active
- Power
- Return Humidity
- Return Temperature
- Supply Humidity
- Supply Temperature

CRAH

- Air Flow
- Cooling Demand
- Cooling Load
- Cooling Output
- Dehumidification Active
- Fan Speed
- Humidification Active
- Power
- Return Humidity
- Return Temperature
- Supply Humidity
- Supply Temperature

Environmental Monitor

- Air Flow
- Ambient Temperature
- Analog Input
- Camera Motion
- Dew Point
- Door Lock Status
- Door Status
- Door Switch
- Dry Contact
- Humidity
- Leak Alarm Zone
- Leak Cable Current
- Leak Unit Distance
- Leak Unit Status
- Leak Zone Distance
- Leak Zone Status
- Light Level
- Power
- Pressure
- Smoke Alarm
- Sound Level

Generator

- Battery Current
- Battery Voltage
- Frequency
- Fuel Level
- Oil Pressure
- Phase Current
- Phase Power
- Phase VA
- Phase Voltage
- Plant Battery Voltage
- Running
- Total Current
- Total Power
- Total VA
- Total VAR

In Row Cooling

- Airflow
- Cooling Demand
- Cooling Load
- Cooling Output
- Dehumidification Active
- Fan Speed
- Humidification Active
- Power
- Return Humidity
- Return Temperature
- Supply Humidity
- Supply Temperature

PDU

- Breaker Current
- Emergency Power
- Frequency
- Panel Current
- Panel Phase Current
- Panel Power
- Panel VA
- Phase Current
- Phase Load
- Phase Power
- Phase Rotation Loss
- Phase VA
- Phase Voltage
- Power Factor
- Total Current
- Total Load
- Total Power
- Total VA
- Total VAR

Power Meter

- Frequency
- Phase Current
- Phase Power
- Phase VA
- Phase Voltage
- Total Current
- Total Power
- Total VA
- Total VAR
- Current
- Outlet Power
- Outlet Status
- Power Factor
- Total Current
- Total Load
- Total Power
- Total VA
- Usable Power

Rack or Tower UPS

- Battery Capacity
- Battery Current
- Battery Discharging
- Battery Voltage
- Bypass Frequency
- Output Power
- Output Source
- Output Total Load
- Output Total Power
- Output Total VA
- Output VA
- Phase Bypass Current
- Phase Bypass Power
- Phase Bypass Voltage
- Phase Input Current
- Phase Input Frequency
- Phase Input Power
- Phase Input Voltage
- Phase Output Current
- Phase Output Load
- Phase Output Voltage
- Power Factor
- Runtime Remaining
- Usable PowerRack PDU
- Current
- Outlet Power
- Outlet Status
- Power Factor
- Total Current
- Total Load
- Total Power
- Total VA
- Usable Power

Transfer Switch

- Selected Source
- Source 1 Circuit Breaker 1 Open
- Source 1 Failure Status
- Source 1 Frequency
- Source 1 Overload
- Source 1 Over Voltage
- Source 1 Phase Current
- Source 1 Phase Voltage
- Source 1 Under Voltage
- Source 2 Circuit Breaker 1 Open
- Source 2 Failure Status
- Source 2 Frequency
- Source 2 Overload
- Source 2 Over Voltage
- Source 2 Phase Current
- Source 2 Phase Voltage
- Source 2 Under Voltage
- Total Load
- Total Power
- Total VA



UPS

- Battery Capacity
- Battery Current
- Battery Discharging
- Battery Status
- Battery Voltage
- Bypass Frequency
- Frequency
- Output Current
- Output Source
- Output Total Load
- Output Total Power
- Output Total VA
- Output Voltage
- Phase Bypass Current
- Phase Bypass Power
- Phase Bypass Voltage
- Phase Input Current
- Phase Input Frequency
- Phase Input Power
- Phase Input Voltage
- Phase Output Current
- Phase Output Load
- Phase Output Power
- Phase Output VA
- Phase Output Voltage
- Power Factor
- Runtime Remaining
- Total VAR

Utility Breaker

- Breaker Position
- Frequency
- Phase Current
- Phase Power
- Phase VA
- Phase Voltage
- Total Current
- Total Power
- Total VA
- Total VAR

MODBUS AND BACNet

Modbus and BACNet protocols are monitoring only. Because of the nature of these two protocols SmartZone™ Cloud includes a constructor that allows customers to define exactly what they want to monitor.

MODEL AND DEVICE DEFINITIONS

A device can be a server, CRAC, PDU, UPS, or any IP accessible device monitored by SmartZone™ Cloud. To correctly model the device, SmartZone™ Cloud needs to understand the device type, manufacturer, and model. This is then mapped to applicable attributes, sensor data and communication protocols.

To arrive at its Model and Device Definitions, SmartZone™ Cloud uses one or more of the following knowledge sources:

MODEL DATA

Model Data allows SmartZone™ Cloud to identify what a device is, down to the manufacturer and model. Apart from identification information, it allows SmartZone™ Cloud to classify a device based on extended attributes, such as space utilization, expected power utilization, network-related information, and any other data that may be relevant (depending on the device type).

The SmartZone™ Cloud model database contains attributes and images of thousands of devices.

If SmartZone™ Cloud fails to identify a device based on model data, it attempts to perform generic detection to identify what the device is. If that fails, the device is added and marked as “Unknown” in the system.



DEVICE DEFINITION

The Device Definition subsystem allows SmartZone™ Cloud to identify a device and react dynamically to the different variations of it. It will also enumerate and pull data from the various sensors available. Sensor data is then mapped to instrumentation points in the SmartZone™ Cloud data model.

Within SmartZone™ Cloud, there are two high level protocol types:

Standards-based protocols (e.g. WMI, IPMI and VMWare) are typically from a single vendor and can be described with a standard algorithm with little to no variation across devices.

Definition-based protocols (e.g. SNMP and SSH) can have many variations between devices, with the only common element being the protocol or language to query the devices. SNMP, for example, can be implemented on power, network, and facility devices. Each one of these devices may have its own level of support for the protocol and its own unique sensor map.

Within definition-based protocols, there are two subcategories: Discoverable Protocols & Non-discoverable Protocols

Discoverable definition-based protocols include SNMP and SSH. This means that SmartZone™ Cloud can use the Identification information in the model data database to automatically identify and model the device. It will then use the definition to map and query the device sensors. (The definition is based on a Domain Specific Language invented by SmartZone™ Cloud for this purpose.)

Non-discoverable definition-based protocols include Building Automation and Control (BACNet/IP), and Modbus/TCP. These protocols are mostly used for building management and industrial control applications. Since each installation for these systems can be unique, SmartZone™ Cloud allows the user to describe the sensors and their mappings using the SmartZone™ Cloud GUI.

SNMP TRAPS

SNMP Traps are push notifications that are sent when a significant event happens, such as a UPS losing power and switching to battery. Trap support and capabilities vary across devices and manufacturers. A trap definition catalogs the various notifications a certain device can send, along with their severity and interpretation.

Trap notification events are mapped to the context of the device using the trap definition. The events are subsequently passed on to SmartZone™ Cloud's notification subsystem.



PANDUIT®

Panduit Corp.
World Headquarters
Tinley Park, IL 60487

800.777.3300

www.panduit.com